

ASTRO® XTS 2500/XTS 2500I

Digital Portable Radio

Quick Reference Card

Product Safety and RF Exposure Compliance



Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C98) to ensure compliance with RF energy exposure limits.



Write your radio's programmed features on the dotted lines.

Select a Zone Using the Menu

- 1 Press until .
- 2 Press , , or directly below ZONE.
- 3 Press until the zone you desire is shown **OR** Use the **keypad** directly to dial the zone number.
- 4 Press to confirm, or press **PTT** to transmit.

Select a Channel

Method 1: Using the Select Knob

After selecting the desired zone, turn the 16-position Select Knob to the desired channel.

Method 2: Using the Menu

- 1 Press until .
- 2 Press , , or directly below CHAN.
- 3 Press until channel you desire is shown.
- 4 Press to confirm, or press **PTT** to transmit.

Send an Emergency Alarm

- 1 Turn the radio ON and press **Emergency** button. You will see a red LED; you hear a short, medium-pitched tone.
- 2 Display shows .
- 3 When acknowledgment is received, you hear four tones; alarm ends; radio exits emergency.

Send Silent Emergency Alarm

- 1 Turn the radio ON and press **Emergency** button. You will see no LED; you will hear no tone.
- 2 Press **PTT**.
- 3 Alarm continues until you exit by:
 - Press and hold **Emergency** button for one second.**OR**
 - Press **PTT** again.





 

 

Answer a Phone Call


- 1 Phone-like ringing, LED blinks GREEN, PHONE CALL and are displayed.
- 2 Press **Call Response** button.
- 3 Press **PTT** button to talk; release to listen.
- 4 Press to hang up.

Send a Phone Call

- 1 Press until .
- 2 Press , , or directly below PHON.
- 3 Press or to scroll to phone number.
- 4 Press **PTT** (or **Quick Access** button, if programmed) to talk, release to listen.

Display Status Symbols

	Call Received. Receiving an individual call.
	View/Program Mode. The radio is in the view or program mode; On Steady = view mode; Blinking = program mode.
	Received Signal Strength Indication (RSSI). Received signal strength for the current site (trunking only). The more signal bars in the symbol, the stronger the signal.
	Battery <ul style="list-style-type: none"> Conventional = Blinks when the battery is low. Smart = The number of bars (0-3) shown indicates the charge remaining in your battery. Note: Smart battery will be available at a future date.
	Talkaround. You are talking directly to another radio or through a repeater; On = direct; Off = repeater
	Monitor (Carrier Squelch). This channel is being monitored.
	Scan. The radio is scanning a scan list.
	User Login Indicator (IP Packet Data) <ul style="list-style-type: none"> On = User is associated with the radio; Off = User is not associated with the radio; Blinking = Registration with the server failed.

	Location Signal <ul style="list-style-type: none"> Off = Location feature disabled, or insufficient battery power in location accessory device; Blinking = Location feature enabled, but no location signal available; On = Location feature enabled, and location signal available.
---	--

Menu Entries (Use With Menu Navigation)

<i>Entry</i>	<i>Menu Selection</i>	<i>Page</i>
BATT	*Smart Battery	19
CALL	Private Call	60
CHAN	Select a Channel	28
CLOCK	Edit Time and Date	78
DIR	Repeater/Direct	66
KILL	Radio Kill	67
MUTE	Keypad Mute	37
NAME	Text Select	49

<i>Entry</i>	<i>Menu Selection</i>	<i>Page</i>
NUM	Number Select	47
PAGE	Call Alert Page	62
PHON	Phone	55
PROG	Editing	47
PSWD	Password	36
RPGM	Reprogram Request	71
SCAN	Scan On/Off	51
SITE	Site Lock	75
STUN	Radio Stun	68
TGRP	Talkgroup Call	65
TMS	Text Messaging	93
USER	User Login	87
VIEW	Viewing a List	45
ZONE	Select a Zone	26

*Available at a future date.

Menu Navigation

